

Escape-Chair® ST-B / ST / ST-PLUS / CF

Evacuation ... in a sitting position

What`s an Escape-Chair®?

An Escape-Chair® is the solution to evacuate people to safety in a seated position down a flight of stairs. A simple procedure can make the Escape-Chair® fully functional within a few seconds.

How does an Escape-Chair® work?

The unique glide/brake system makes the braking of the Escape-Chair® possible on all different kinds of stairs, from wood to concrete. This braking system is optimized by the weight of the evacuee, in combination with the pressure of the operator pushing down on the handle in the direction of the stairs.

Advantages Escape-Chair®:

- Ideal for quick evacuation.
- Can be operated by a single person.
- Ready for use within seconds.
- Carrying people is no longer necessary.
- Speed of descent to be determined by the user (extra brake is unnecessary).
- Easily maneuvering into the evacuation flow.
- Forms minimal blockage on the stairs.
- Fits into your emergency plan.
- Safe closed gliding belt cassette.
- CE, TÜV & ISO 9001 certified.

Our advice:

Make sure you have an Escape-Chair® available in your organization so that you're prepared for any emergency.

"Failure to prepare for an emergency has its consequences."



ST-B Model




ST Model

ST-PLUS Model

CF Model



Specifications	Escape-Chair® ST-B	Escape-Chair® ST	Escape-Chair® ST-PLUS	Escape-Chair® CF
Article number:	10012	10020	10030	10040
Dimensions folded up (height x width x depth):	102 x 51 x 18 cm	102 x 51 x 18 cm	120 x 51 x 21 cm	120 x 57 x 21 cm
Maximum payload::	185 kg	185 kg	185 kg	185 kg
Maximum stair gradient:	40°	40°	40°	40°
Weight:	± 10 kg	±10 kg	± 11 kg	±13 kg
Ergonomic backrest:	single	single	double	double
Demonstration and advise provided:	✓	✓	✓	✓
Ready for use within seconds:	✓	✓	✓	✓
Speed of descent to be determined by the user:	✓	✓	✓	✓
CE, TÜV & ISO 9001 certified:	✓	✓	✓	✓
Safe closed gliding belt cassette:	✓	✓	✓	✓
Delivery incl. 4-language manual, instruction DVD, identity sign & wall hooks:	✓	✓	✓	✓
Footrest:	optional	optional	optional	✓
Armrests:	-	optional	optional	✓
Padded (upholstered) headrest:	optional	✓	✓	✓
Comfort seat:	-	-	✓	✓
Two height adjustable operating handle:	-	-	✓	✓
Warranty on non-wearing parts:	6 years	6 years	6 years	6 years

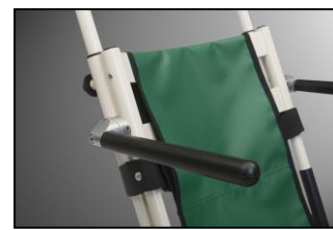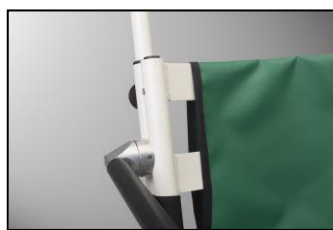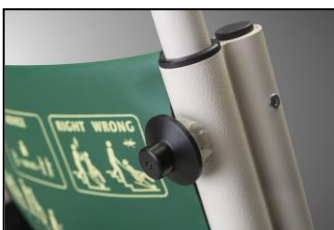

Interim changes to technical specifications and printing errors reserved.
Produced by Escape Mobility Production & Innovation: TÜV approved organization.



Escape Mobility USA, LLC

1261 S. Lyon Street, suite 405 • Santa Ana • CA 92705

T +1 888 258-0602 • F +1 714 912-2992

info@escape-mobility.com

www.escape-mobility.com