

YOUR WAY TO SAFETY





...your way to safety

ARE YOU PREPARED TO EVACUATE PEOPLE FROM YOUR BUILDING?

THE FIRE AND RESCUE SERVICE IS NOT RESPONSIBLE FOR EVACUATING PEOPLE FROM YOUR BUILDING!


As the nominated responsible person in your organisation it is your job to identify the types of people that are at risk in the event of an emergency. You have carried out your fire risk assessment and identified that Peter is in a wheelchair, John is a heart patient, Eva from marketing on the 2nd floor, is now six months pregnant, Eric from funding, is a real winter sports enthusiast and he has broken his leg. How do you get these people to a place of safety when the lift is not in use?

The risk is bigger than you think! You are responsible for the safe evacuation of the people in the building. There are visible risks e.g. Peter in a wheelchair and women who are pregnant.

But there are also invisible risks e.g. heart problems, blind, deaf, asthma, people with autism, etc. that would also have difficulty getting to a place of safety unaided. Emergencies by definition are sudden events and the objective is to be prepared. Are you prepared to take that risk?

"Failure to prepare for an emergency has its consequences."

Peter, John, Eva and Eric will be grateful!

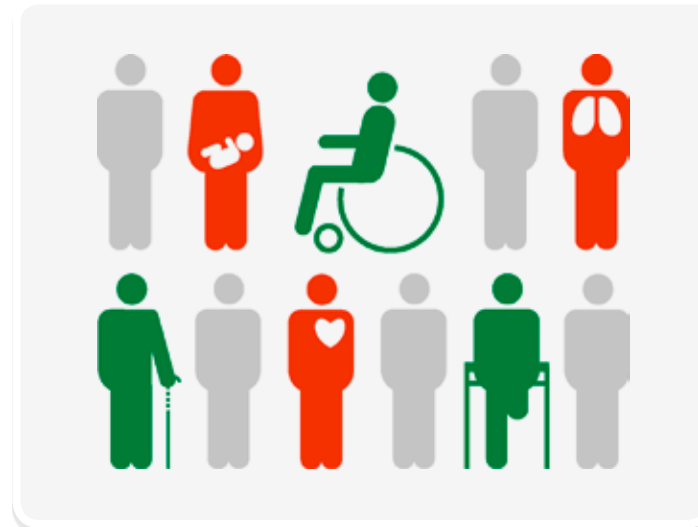

APPROPRIATE EVACUATION SOLUTIONS

SITTING OR LYING EVACUATION?

What is the difference? When should I be evacuated using a chair? When should I be evacuated in a mattress? Evacuation chairs help to ensure the safety of mobility-restricted people during an emergency situation. People who would benefit from evacuation chairs are not just people in wheelchairs. Less able or perhaps people suffering from short-term injury all need to be catered for, should an emergency evacuation occur. An evacuation mattress or evacuation sheet can be used. If the evacuee is unable to sit,

e.g. stroke patients, spinal injuries or unconsciousness, or if you have a spiral staircase in your building.

Escape Mobility Company can help solve your evacuation problem. We do more than just make evacuation equipment. We think specifically to your situation, and make an appropriate recommendation. You can see us as your personal evacuation advisor. How easy is that?

Below you will find different icons. These icons are shown on the right hand tabs. You can then go directly to which is applicable to you. Questions or hesitations? Please contact us! We are here to help you.




EVACUATION CHAIRS



EVACUATION MATTRESSES



EVACUATION SHEETS

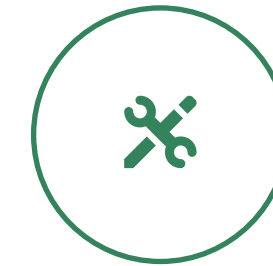

ACCESSORIES, TRAINING & MAINTENANCE





EVACUATION CHAIRS

...your way to safety



WHAT IS AN ESCAPE-CHAIR®?

An Escape-Chair® is the solution to evacuate people to safety in a seated position down a flight of stairs. A simple procedure can make the Escape-Chair® fully functional within a few seconds. The Escape-Chair® is an "A-label quality" product and produced in-house. We guarantee the highest quality standards.



LIFE-SAVING BENEFITS

- Ideal for quick evacuation
- Can be operated by a single person
- Carrying people is no longer necessary
- Ready for use within a few seconds
- Speed of descent to be determined by the user (extra brake is unnecessary)
- Easily maneuvering into the evacuation flow
- Forms no blockage on the stairs
- Fits your emergency plan

HOW DOES AN ESCAPE-CHAIR® BRAKE?

The unique glide/brake system makes the braking of the Escape-Chair® possible on all different kinds of stairs, from wood to concrete. This braking system is optimized by the weight of the evacuee, in combination with the pressure of the operator pushing down on the handle in the direction of the stairs.

WARRANTY

The Escape-Chair® models have a 6 year warranty on non wearing parts (not including glide belts).

CERTIFICATION

Escape-Chair® models are CE certified, TUV and ISO 9001.

DO YOU NEED ADVICE IN MAKING THE RIGHT CHOICE?

Contact us
T +1 888 258 0602
info@escape-mobility.com



BEST CHOICE FOR GENERAL EVACUATION

There are four models of Escape-Chair® available. General evacuation ranging from your standard chair to an upgraded comfort chair.



Scan this QR code to view a short film of the Escape-Chair®



WWW.ESCAPE-MOBILITY.COM

ESCAPE-CHAIR® ST-B
Article Nr. 10010

- Standard model non powder coated
- Standard head rest
- Up to 185kg.



ESCAPE-CHAIR® ST
Article Nr. 10020

- Upgrade with powder coated frame
- Anti-slip on operating handle
- Fixed seat and upholstered headrest
- Up to 185kg.



ESCAPE-CHAIR® ST-PLUS
Article Nr. 10030

- Upgrade with double ergonomic back support
- Two height adjustable operating handle
- Comfortable seating and upholstered headrest
- Up to 185kg.



ESCAPE-CHAIR® CF
Article Nr. 10040

- Upgraded with armrest and footrest
- Recommended for people who have high dependency levels such as wheelchair user, pregnant women, or must sit for a long time in the Escape-Chair®
- Ideal for a comfortable and quick evacuation
- Up to 185kg.



EVACUATION WITH MORE COMFORT?



WHAT IS AN ESCAPE-CARRY CHAIR®?

An Escape-Carry Chair® is the solution to bring people to safety in a seated position up the stairs as well as down the stairs. A simple procedure can make the Escape-Carry Chair® fully functional within a few seconds. It is fitted with carrying handles to make the ascending evacuation easier. The Escape-Carry Chair® is an "A-label quality" product and produced in-house. We guarantee the highest quality standards.

LIFE-SAVING BENEFITS

- Ideal for quick evacuation
- Safe evacuation up the stairs as well as down the stairs
- Ready for use within a few seconds
- Speed of descent to be determined by the user (extra brake is unnecessary)
- Easily manoeuvring into the evacuation flow
- Fits your emergency plan

HOW DOES AN ESCAPE-CARRY CHAIR® BRAKE?

The unique glide/brake system while descending the stairs makes the braking of the Escape-Carry Chair® possible on all different kinds of stairs, from wood to concrete. This braking system is optimized by the weight of the evacuee, in combination with the pressure of the operator pushing down on the handle in the direction of the stairs. No brake is required in an ascending evacuation as the carrying handles allow you to stop on each step if required.

WARRANTY

The Escape-Carry Chair® models come with 3 years warranty on non-wearing parts (not including glide belts).

CERTIFICATION

The Escape-Carry Chair® model models are CE certified, TUV and ISO 9001.



**DO YOU NEED ADVICE
IN MAKING THE RIGHT
CHOICE?**

Contact us
T +1 888 258 0602
info@escape-mobility.com

**BEST CHOICE FOR
GENERAL EVACUATION**

There are four models of Escape-Carry Chair® available. General evacuation ranging from your standard chair to an upgraded comfort chair.



Scan this QR code to view a short film of the Escape-Chair®



WWW.ESCAPE-MOBILITY.COM

ESCAPE-CARRY CHAIR® ST
Article Nr. 10110

- Standard model non powder coated
- Standard head rest
- Up to 185kg.



ESCAPE-CARRY CHAIR® XS
Article Nr. 10150

- Very narrow version making it useful in very narrow aisles and / or stairwells
- Up to 185kg.



ESCAPE-CARRY CHAIR® ST-PLUS
Article Nr. 10120

- Upgrade with double ergonomic back support
- Two height adjustable operating handle
- Comfortable seating and upholstered headrest
- Up to 185kg.



ESCAPE-CARRY CHAIR® CF
Article Nr. 10130

- Upgraded with armrest and footrest
- Recommended for people who have high dependency levels such as wheelchair user, pregnant women, or must sit for a long time in the Escape-Chair®
- Ideal for a comfortable and quick evacuation
- Up to 185kg.



**GENERAL EVACUATION
WITH MORE COMFORT**





EVACUATION MATTRESSES

...your way to safety

WHAT IS AN ESCAPE-MATTRESS®?

Escape-Mattress® models are designed for individuals who would not be able to comfortably get into an evacuation chair, or where evacuation chairs may struggle (for example when evacuating an individual down a spiral staircase). Evacuation mattresses are ideal for medical centres and hospitals, as they cater for complex healthcare needs. E.g. bed-bound and unconscious patients. The Escape-Mattress® models are designed for

different situations to meet the needs of certain environments. The Escape-Mattress® is an "A-label quality" product and produced in-house. We guarantee the highest quality standards.

HOW DOES IT WORK?

Escape-Mattress® models can be used to tow evacuees along the floor (min. 2 persons) and have handles strategically placed on the side to allow easy manoeuvrability.

LIFE-SAVING BENEFITS

- Ideal for quick evacuation
- Carrying people is no longer necessary
- Ready for use within a few seconds
- Safe evacuation down the stairs
- Speed of descent to be determined by the user
- Easily manoeuvring into the evacuation flow
- Fits your emergency plan
- Acid and bodily fluid resistant

WARRANTY

The Escape-Mattress® models have 2 years manufacturer's guarantee.

CERTIFICATION

Escape-Mattress® models are CE certified.



**DO YOU NEED ADVICE
IN MAKING THE RIGHT
CHOICE?**

Contact us
T +1 888 258 0602
info@escape-mobility.com



ESCAPE-MATTRESS® SOLO
Article Nr. 21020

- Immediately ready for use
- Includes storage bag
- Max carry weight 150kg.

ESCAPE-MATTRESS® COMPACT
Article Nr. 21030

- Can be rolled up
- Includes storage bag
- Max carry weight 150kg.



ESCAPE-MATTRESS® FOLD
Article Nr. 21010

- Can be folded in half
- Release straps and ready for use
- Available in sizes from 55 or 70cm
- Max carry weight 150kg.

WHAT IS AN ESCAPE-MATTRESS® STRETCHER?

The Escape-Mattress® Stretcher replaces the standard mattress on an ambulance stretcher. The Escape-Mattress® Stretcher can be specifically tailored to your stretcher by our own production department.



BENEFITS OF AN ESCAPE-MATTRESS® STRETCHER

- Escape-Mattress® Stretcher can be used as a towing and carrying stretcher
- Extremely reduces the need to lift patients
- Fits through narrow stair cases / corridors
- Available in black and green

The Escape-Mattress® stretcher is mainly used by professionals, Ambulance, Fire Service, Army, etc.



Scan this QR code to go to a short film of the Escape-Mattress®



WWW.ESCAPE-MOBILITY.COM



WHAT`S AN ESCAPE-AIR MATTRESS®?

The Escape-Air Mattress® is the only inflatable and versatile mattress for rapid evacuation over land and water. Because of the remarkably high wear and impact resistance, the Escape-Air Mattress® can be used on ANY terrain. Buoyancy and stability makes it well suited for rescue on water and the evacuee has maximum protection.

HOW DOES AN ESCAPE-AIR MATTRESS® WORK?

Made of ultra-high-molecular-weight (UHMW) this Escape-Air Mattress® has a high impact and heavy wear-resistant sliding layer, with very low coefficient friction; that makes it unique in its class. The Escape-Air Mattress® is inflated using CO2 cartridges. The Escape-Air Mattress® models can be used to move evacuees along the floor (min. 2 people) and have handles strategi-

cally placed on the side to allow easy maneuverability.

LIFE-SAVING BENEFITS

- Very compact and easy to store
- High wear and impact resistance
- Very low friction makes it easy to use on all different kinds of terrain
- Extra-long towing straps to help operators with improved handling practices

- Handgrips to assist with sideways manoeuvrability
- Ready for use within seconds
- Safe evacuation over all kinds of terrain
- Including CO2 cartridge (refillable or non-refillable)

WARRANTY

The Escape-Air Mattress® models have respectively 1 and 2 years manufacturers guarantee.

CERTIFICATION

Escape-Air Mattress® models are CE certified.

ADVICE NEEDED?

Contact us
T +1 888 258 0602
info@escape-mobility.com



ESCAPE-AIR MATTRESS® SE
Article Nr. 22010

- Maximum protection of evacuee
- Pressure release protection
- Universal inflation valve
- Single layer UHMW protection
- Plastic buckles
- Including backpack/storage bag
- Max carry weight 250kg
- 1 year manufacturers guarantee



Scan this QR code to go to a short film of the Escape-Air Mattress®



WWW.ESCAPE-MOBILITY.COM



ESCAPE-AIR MATTRESS® SO
Article Nr. 22020

- Maximum protection of evacuee
- Pressure release protection
- Universal inflation valve
- Double layer UHMW protection
- Reflective piping
- LED light-strips
- Foot cover
- Steel buckles
- Including backpack/storage bag
- Max carry weight 250kg
- 2 years manufacturers guarantee





EVACUATION SHEETS

...your way to safety



WHAT IS AN ESCAPE-SHEET®?

People who are unable to leave their beds, must be evacuated during an emergency. One way of evacuation is an Escape-Sheet®. An Escape-Sheet® is permanently under the mattress and in an event of an emergency, the safety straps of the evacuation sheets are secured over the mattress and the patient. The patient is then immobilized for the safe evacuation down the stairs.

HOW DOES AN ESCAPE-SHEET® WORK?

In an emergency, the strong safety belts are released from under the mattress. These safety belts are secured over the patient and the bedding. The Escape-Sheet® can then be pulled off the bed, along with the mattress and the person. This can be used in both horizontal and vertical evacuation.



WHO IS AN ESCAPE-SHEET® INTENDED FOR?

Escape-Sheet® is widely used by hospitals and healthcare facilities. Assists in moving a patient to a place of safety.

LIFE-SAVING BENEFITS

- Ideal for quick evacuation
- Carrying people is no longer necessary
- Ready for use within a few seconds
- Always accessible

- Optional: Heat and flame-resistant version (HFR)
- Optional: Towing straps available in 3 different colors (intuitive handling)

WARRANTY

The Escape-Sheet® models have 2 years manufacturer's guarantee.

CERTIFICATION

Escape-Sheet® models are CE certified.

**DO YOU NEED ADVICE
IN MAKING THE RIGHT
CHOICE?**

Contact us
T +1 888 258 0602
info@escape-mobility.com



ESCAPE-SHEET® STANDARD

Article Nr. 21240



- Static-Control™ (antistatic polyester)
- Adjustable fixing straps
- Extra-long towing straps
- Provided with storage pockets for straps and buckles
- ± 200x90cm
- 250kg payload



ESCAPE-SHEET® PREMIUM

Article Nr. 21250

- Provided with body overlap covers (for extra protection of an evacuee)
- Additional strap provided by the foot area (for better maneuverability and to reduce friction)
- Static-Control™ (antistatic polyester)
- Adjustable fixing straps
- Extra-long towing straps
- ± 200x90cm
- 250kg payload

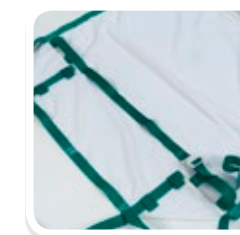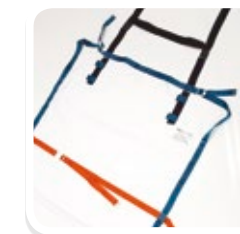



ACCESSORIES, TRAINING & MAINTENANCE

...your way to safety



ACCESSORIES

ACCESSORIES AND OPTIONAL EXTRAS FOR THE ESCAPE-CHAIR®, ESCAPE-CARRY CHAIR® AND ESCAPE-MATTRESS®

Below is a selection from the range of storage solutions.

WE ALSO PROVIDE ACCESSORIES FOR THE USER

Below is a selection from the range of accessories and extra user supports.

WWW.ESCAPE-MOBILITY.COM

DO YOU HAVE QUESTIONS ABOUT ACCESSORIES?

Contact us
T +1 888 258 0602
info@escape-mobility.com




DUST COVER

Cover for Escape-Chair®
Protects against dust, dirt and direct sun light



DUST COVER

For Escape-Mattress® Fold. This storage bag protects the Escape-Mattress® Fold against dust, dirt and direct sun light.

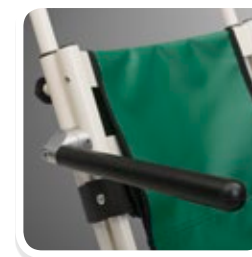

ARMRESTS

The armrests give the evacuee more support and ease when transferring from a wheel chair as well as providing extra security for the evacuee.



EXTRA BACK SUPPORT

This extra wide, padded backrest provides improved support of the back during an evacuation.




ESCAPE LOCKER

Cabinet for an Escape-Chair® or Escape-Mattress®, Fold model.



IDENTITY SIGN ESCAPE-CHAIR®

Identifies the location of an Escape-Chair®/ Escape-Mattress® or Escape-Carry Chair®.

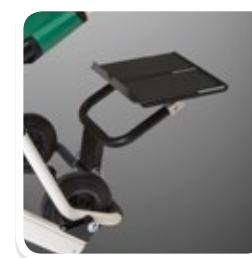

FOOTREST

The footrest improves support and blood flow and provides extra comfort for the evacuee.



ESCAPE HARNESS

This harness allows extra immobilisation of fragile or unconscious people during an evacuation.




STAND-ALONE HOLDER

The stand-alone holder is free standing and fully equipped with brackets to which the Escape-Chair® can be suspended.




ESCAPE ALARM

This alarm will sound when an Escape-Chair® or Escape-Carry Chair® is removed from the wall.

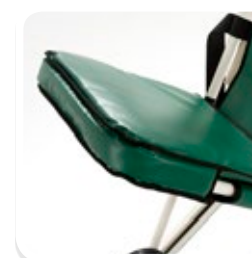

UPHOLSTERED SEAT

This increases the height of the sitting position of the evacuee. Especially helpful for wheelchair users and elderly people.

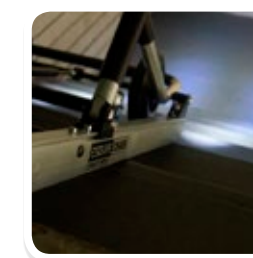

ESCAPE-LED LIGHT (SET)

For safe evacuation in a dark environment. Lights up stairwell as you descend.



DEMONSTRATIONS, BUILDING ANALYSIS, ADVISE & TRAINING

DEMONSTRATIONS / BUILDING ANALYSIS / ADVISE

No two buildings and no two situations are the same. Our advisors provide appropriate evacuation advice. Appropriate for your specific situation. The building analysis is an important part of this, therefore we also offer this free of charge.

Our evacuation advisers come to you. We help you to identify which equipment is appropriate to your situation / circumstances.

TRAINING

Escape Mobility offers two types of training which are all conducted by our experts trainers. All training carried out is site spe-

cific, so staff are trained to use the evacuation equipment in their own building.

Practical evacuation equipment training sessions teach delegates to use evacuation equipment and to do so with confidence. These sessions ensure that they can help people safely escape from their building.

We offer a practical train the trainer course that certifies staff members to train others in the use of the evacuation equipment.

WWW.ESCAPE-MOBILITY.COM



MAINTENANCE & CUSTOMER SERVICE

MAINTENANCE


An Escape Chair®, and other types of evacuation chairs must be checked regularly and maintained. This is an legal requirement under PUWER Regulations. Escape Mobility Company offers different service options. From one-off maintenance to a multi-year maintenance contract. Everything is possible! With an annual inspection you can be sure in any case, that the evacuation chairs is in the best condition when needed.

Throughout our years of experience, we can also carry out maintenance of various types and brands of evacuation chairs!

CUSTOMER SERVICE

Escape Mobility Company has its own customer service team with enthusiastic and skilled consultants to answer all your questions. All consultants in the team have an own specialised area, so you always get the information you need.

WWW.ESCAPE-MOBILITY.COM

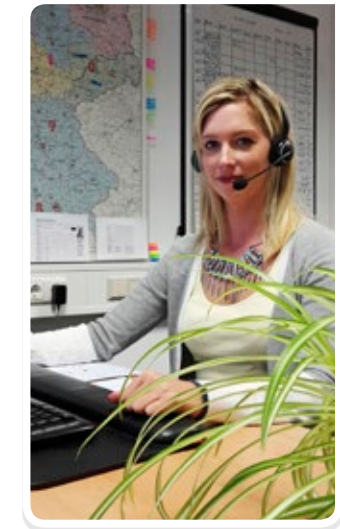



...your way to safety





ESCAPE MOBILITY USA, LLC

1261 S. Lyon Street • suite 405 • Santa Ana
CA 92705 • USA

T +1 888 258 0602 • F +1 714 912 2992

www.escape-mobility.com • info@escape-mobility.com



Follow us:

